### **MotionProtect Plus Jeweller user manual**



**MotionProtect Plus Jeweller** is a wireless indoor motion detector. It can operate for up to 5 years from an built-in battery, and monitors the area within a 12-meter radius. MotionProtect Plus ignores animals, while recognizing a human from the first step. Together with the IR sensor, detector applies a radio-frequency scan that filters out thermal interference.


MotionProtect Plus operates within the Ajax system, connected to the <u>hub</u> via the protected <u>Jeweller</u> protocol. The communication range is up to 1200 meters in the line of sight. In addition, the detector can be used as a part of third-party security central units via the <u>uartBridge</u> or <u>ocBridge</u> <u>Plus</u> integration modules.

The detector is set up via the Ajax app for iOS, Android, macOS and

Windows. The system notifies user of all events through push notifications, SMS and calls (if activated).

**Buy MotionProtect Plus Jeweller** 

### **Functional Elements**

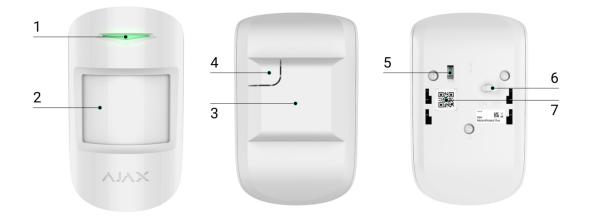

- 1. LED indicator.
- 2. Motion detector lens.
- 3. SmartBracket mounting panel. To remove the panel, slide it down.
- **4.** Perforated part of the mounting panel. Necessary to trigger a tamper in case of any attempt to detach the detector from the surface. Do not break it off.
- **5.** <u>Tamper button</u>. Triggers when an attempt is made to detach the detector from the surface or remove it from the mounting panel.
- 6. Device switch.
- 7. Detector QR code. Is used to connect the device to the Ajax system.

## **Operating principle**

MotionProtect Plus is a wireless motion detector with an additional microwave sensor. Using the IR sensor, it can identify intrusions by detecting moving objects with temperatures close to that of the human body.

When MotionProtect Plus detects motion, it conducts an additional RF scan of the room with built-in K-band microwave sensor to eliminate false alarms due to thermal interference: air flows, heated curtains and blinds, fans, fireplaces, air conditioners, and other likely sources of false alarms.

Do not install the device near other MotionProtect Plus Jeweller, Superior MotionProtect Plus Jeweller, or Superior MotionProtect Plus Fibra. The minimum distance between devices should be **at least 20 centimeters**. Otherwise, it can decrease detection quality or trigger false alarms due to wave interference of Kband microwave sensors.

When an armed detector identifies motion, it instantly sends an alarm to the hub, activating the sirens connected to the system, triggering scenarios, and notifying users and the security company. All MotionProtect Plus alarms and events are recorded in the event feed of the Ajax apps.


Users know exactly where motion is detected. The notifications contain the name of the hub (protected facility), the name of the device, and the virtual room to which the detector is assigned.

#### More about Ajax motion detectors

The detector doesn't arm instantly. The time it takes to switch to armed mode depends on exit delays (specified in the detector settings) and the hub-detector polling interval (**Jeweller** or **Jeweller/Fibra** settings, the default value is 36 seconds). In the first case, the delay is set by an administrator or a PRO-user with administrator rights. In the second case, the delay occurs because the hub takes one ping interval to notify the detector about the transition to armed mode.

### Pet immunity

When properly installed and configured, MotionProtect Plus does not react to animals up to 50 centimetres tall and weighing up to 20 kilograms.

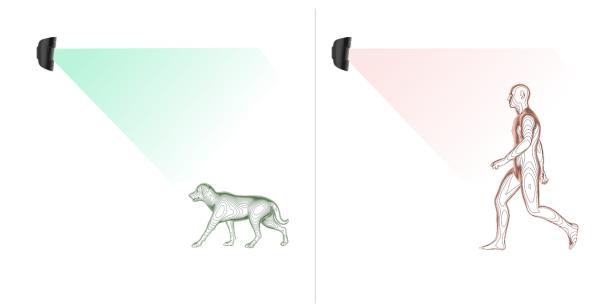

The detector must be installed at 2.4 meters without obstruction to its view. For example, in a corner where the view will not be blocked by a closet or other furniture on which a pet can climb.

It is also important to set the proper sensitivity in the detector settings:

- High the detector does not react to cats (up to 25 cm tall).
- Medium it does not react to small dogs (up to 35 cm tall).
- Low it does not react to animals up to 50 cm tall.

When indoor motion detectors are installed below the recommended height, animals move in the hypersensitive zone. The detector can raise the alarm if a shepherd walks on its hind legs or even a tiny spaniel plays on a chair. The detector will also raise the alarm if the animal can jump to the level of MotionProtect Plus or move near it.

#### Why detectors react to animals and how to avoid this

#### How to install MotionProtect correctly

### **Temperature compensation**

The detector perceives people and other objects as heat spots. The device monitors these heat spots and, if they move, detects an alarm. MotionProtect Plus reacts to the movement of heat spots whose temperature is close to the human body.

When the ambient temperature is about the temperature of the human body, the correct operation of the detector is not guaranteed unless temperature compensation is applied. It is used in all Ajax motion detectors. MotionProtect Plus recognizes motion across the entire operating temperature range with temperature compensation.

#### Learn more about temperature compensation

### Sending events to the monitoring station

The Ajax system can transmit alarms to the **PRO Desktop** monitoring app as well as the central monitoring station (CMS) in the formats of the **Sur-Gard protocol (Contact ID)**, **SIA (DC-09)**, **ADMECO 685**, and other proprietary protocols. A complete list of supported protocols is **available by the link**.

#### Which CMSs can the Ajax system be connected to

#### MotionProtect Plus can transmit the following events:

- 1. Motion alarm.
- 2. Tamper alarm / restoration.
- **3.** Loss / restoration of connection with the hub or radio signal range extender.
- 4. Permanent deactivation / activation of the detector.
- Unsuccessful attempt to arm the security system (when <u>System</u> Integrity Check is enabled).

When an alarm is received, the security company monitoring station operator knows what happened and precisely where to send a fast response team on the site. The addressability of Ajax devices allows sending events to the PRO Desktop or the CMS the type of the device, its name, security group, and virtual room. Note that the list of transmitted parameters may differ depending on the kind of CMS and the selected protocol for communication with the monitoring station.

The device ID and the loop (zone) number can be found in <u>device states in the</u> Ajax app.

## Connecting to the security system

#### Before adding a device

- 1. Install the Ajax app.
- 2. Log in to your <u>account</u> or create a new one.
- 3. Select a space or create a new one.

#### What is a space

#### How to create a space

The **space** functionality is available for apps of such versions or later:

- Ajax Security System 3.0 for iOS;
- Ajax Security System 3.0 for Android;
- Ajax PRO: Tool for Engineers 2.0 for iOS;
- Ajax PRO: Tool for Engineers 2.0 for Android;
- Ajax PRO Desktop 4.0 for macOS;
- Ajax PRO Desktop 4.0 for Windows.
- 4. Add at least one virtual room.
- **5.** Add a **compatible hub** to the space. Ensure the hub is switched on and has internet access via Ethernet, Wi-Fi, and/or mobile network.
- **6.** Ensure the space is disarmed, and the hub is not starting an update by checking statuses in the Ajax app.



Only a PRO or a space admin with the rights to configure the system can add a device to the hub.

#### Types of accounts and their rights

### Connecting to the hub

- **1.** Open the Ajax app. If you have access to multiple hubs or using the PRO app, select the hub where you want to add the detector.
- 2. Go to the **Devices b** tab and click **Add Device**.
- Name the detector, scan or type in the QR code (placed on the detector and the package box), and select a room and a group (if <u>Group mode</u> is enabled).



- 4. Press Add.
- 5. Switch on the device.



If the connection fails, turn the detector off and try again in 5 seconds. Note that if the maximum number of devices has already been added to the hub (**depending on the hub model**), you will be notified when you try to add a new one.

To connect MotionProtect Plus to the hub, the detector must be located at the same facility as the system (within the hub radio signal range). For the detector to work via the radio signal range extender, you need first add the detector and range extender to the hub, then connect it to the range extender.

The detector connected to the hub will appear in the list of hub devices in the Ajax app. Updating the statuses of devices in the list depends on the **Jeweller** or **Jeweller/Fibra** settings; the default value is 36 seconds.

The hub and the device operating at different radio frequencies are incompatible. The radio-frequency range of the device may vary by region. We recommend purchasing and using Ajax devices in the same region. You can check the range of operating radio frequencies with the <u>technical support service</u>

MotionProtect Plus works with one hub. When connected to a new hub, the detector stops sending events to the old one. When added to a new hub, the detector is not removed from the device list of the old hub. This must be done through the Ajax app.

### Connecting to third party security systems

To connect the detector to a third party security central unit with the **uartBridge** or **ocBridge Plus** integration module, follow the recommendations in the manuals of these devices.

## Malfunctions

When a malfunction is detected (for example, there is no connection via Jeweller), the Ajax app displays a malfunction counter on the device icon. All malfunctions are shown in the detector states. Fields with malfunctions will be highlighted in red.

#### A malfunction is displayed if:

- The detector temperature is out of acceptable limits: below -10°C and above +40°C.
- The detector enclosure is open (tamper is triggered).
- No connection with the hub or radio signal range extender via Jeweller.
- The detector battery is low.

## Icons

The icons display some of the MotionProtect Plus states. You can view them in the Ajax app in the **Devices** tab. To access them:

- **1.** Sign in to the <u>Ajax app</u>.
- **2.** Select the hub if you have several of them or using a PRO app.
- **3.** Go to the **Devices -** tab.

lcon	Meaning
111	Jeweller signal strength. Displays the signal strength between the detector and hub or range extender. The recommended value is 2 or 3 bars.
Ì	The detector battery charge level.
RE	The detector is operating via a radio signal range extender.
(24)	The detector operates in the <b>Always active</b> mode.
Ŀ	Entry delay is enabled. Learn more
6	Exit delay is enabled. Learn more
0	MotionProtect Plus will arm in <b>Night mode</b> .
Ŗ	MotionProtect Plus has detected motion. The icon is displayed when the detector is armed.
Ŵ	The device is in the signal attenuation test mode.
®j	MotionProtect Plus is disabled. Learn more

O.	MotionProtect Plus has been deactivated due to exceeding the preset number of alarms.
¥	MotionProtect Plus has tamper triggering events deactivated.
Offline	The device has lost connection with the hub or the hub has lost connection with the Ajax Cloud server.
Not transferred	The device has not been transferred to the new hub.

### States

The states include information about the device and its operating parameters. The states of MotionProtect Plus can be found in the Ajax app:

- **1.** Go to the **Devices •** tab.
- 2. Select MotionProtect Plus from the list.

Parameter	Value
Data import	Displays the error when transferring data to the new hub:
	• Failed — the device has not been transferred to the new hub.
	Learn more

	Detector temperature. It is measured on the processor and changes gradually. Acceptable error between the value in the app and the room temperature – 2°C.
Temperature	The value is updated as soon as the detector identifies a temperature change of at least 2°C.
	You can configure a scenario by temperature to control automation devices
	Learn more
Jeweller Signal Strength	Signal strength between the detector and hub or range extender on the Jeweller channel. The recommended value is 2 or 3 bars.
	Jeweller is a protocol for transmitting MotionProtect Plus events and alarms.
	Connection status on the Jeweller channel between the detector and hub or the range extender:
	• <b>Online</b> – the detector is connected to
Connection via Jeweller	the hub or the range extender. Normal state.
	• Offline – the detector is not connected
	to the hub or the range extender. Check the device connection.
	Displays the selected power of the transmitter.
Transmitter power	The parameter appears when the <b>Max</b> or <b>Attenuation</b> option is selected in the <b>Signal attenuation test</b> menu.
	Learn more

	Battery level of the device. Displayed as a percentage.
	When the batteries are low, the Ajax apps and the security company will receive appropriate notifications.
Battery Charge	After sending a low battery notification, the detector can work for up to 2 months.
	How the battery charge is displayed
	Battery life calculator
	The status of the detector tamper that responds to detachment or opening of the device enclosure:
	• <b>Open</b> – the detector was removed from
	the SmartBracket, or detector integrity was compromised. Check the device.
Lid	• <b>Closed</b> – the detector is installed on the
	SmartBracket mounting panel. The integrity of the device enclosure and the mounting panel is not compromised— normal state.
	Learn more
ReX	Displays the status of using a <b>radio</b> <b>signal range extender</b> .
	Sensitivity level of the motion detector:
	<ul> <li>Low — it does not react to animals up to</li> </ul>
	50 cm tall.
Sensitivity	• Normal (by default) — it does not react
	to small dogs (up to 35 cm tall).
	• <b>High</b> – the detector does not respond to
	cats (up to 25 cm tall).

Always Active       Learn more         Always Active       Learn more         Shows the status of the device permanent deactivation function:       No: the device operates in the normal mode.         Permanent Deactivation       No: the device operates in the normal mode.         Permanent Deactivation       Entirely: the device is completely excluded from the system operation. The device does not follow system commands and does not report alarms or other events.         By number of alarms: the device is automatically disabled when the number of alarms is exceeded (specified in the settings for Devices Auto Deactivation).         Learn more         Alarm Reaction         Operating Mode       Shows how the detector reacts to alarms:         • Entry/Exit – when a delay is set, the armed device starts the countdown and doesn't raise the alarm even if triggered until the countdown ends.         • Follower – the detector inherits the		
deactivation function:         • No: the device operates in the normal mode.         • Lid only: notifications about triggering of the tamper is turned off.         • Entirely: the device is completely excluded from the system operation. The device does not follow system commands and does not report alarms or other events.         • By number of alarms: the device is automatically disabled when the number of alarms is exceeded (specified in the settings for Devices Auto Deactivation).         Learn more         Alarm Reaction         Operating Mode       • Instant Alarm – the armed detector immediately reacts to a threat and raises the alarm.         • Entry/Exit – when a delay is set, the armed device starts the countdown and doesn't raise the alarm even if triggered until the countdown ends.	Always Active	constantly armed, detects motion, and raises alarms.
deactivation function:         • No: the device operates in the normal mode.         • Lid only: notifications about triggering of the tamper is turned off.         • Entirely: the device is completely excluded from the system operation. The device does not follow system commands and does not report alarms or other events.         • By number of alarms: the device is automatically disabled when the number of alarms is exceeded (specified in the settings for Devices Auto Deactivation).         Learn more         Alarm Reaction         Operating Mode       • Instant Alarm – the armed detector immediately reacts to a threat and raises the alarm.         • Entry/Exit – when a delay is set, the armed device starts the countdown and doesn't raise the alarm even if triggered until the countdown ends.		
Permanent Deactivation       mode.         Permanent Deactivation       Entirely: the device is completely excluded from the system operation. The device does not follow system commands and does not report alarms or other events.         By number of alarms: the device is automatically disabled when the number of alarms is exceeded (specified in the settings for Devices Auto Deactivation).         Learn more         Alarm Reaction         Operating Mode         Operating Mode		
Permanent Deactivation       mode.         Permanent Deactivation       Entirely: the device is completely excluded from the system operation. The device does not follow system commands and does not report alarms or other events.         By number of alarms: the device is automatically disabled when the number of alarms is exceeded (specified in the settings for Devices Auto Deactivation).         Learn more         Alarm Reaction         Operating Mode         Operating Mode		• No: the device operates in the normal
Permanent Deactivation       • Lid only: notifications about triggering of the tamper is turned off.         • Entirely: the device is completely excluded from the system operation. The device does not follow system commands and does not report alarms or other events.         • By number of alarms: the device is automatically disabled when the number of alarms is exceeded (specified in the settings for Devices Auto Deactivation).         Learn more         Alarm Reaction         Shows how the detector reacts to alarms:         • Instant Alarm – the armed detector immediately reacts to a threat and raises the alarm.         • Entry/Exit – when a delay is set, the armed device starts the countdown and doesn't raise the alarm even if triggered until the countdown ends.         • Follower – the detector inherits the		
Permanent Deactivation       the tamper is turned off.         Permanent Deactivation       Entirely: the device is completely excluded from the system operation. The device does not follow system commands and does not report alarms or other events.         By number of alarms: the device is automatically disabled when the number of alarms is exceeded (specified in the settings for Devices Auto Deactivation).         Learn more         Alarm Reaction         Shows how the detector reacts to alarms:         Instant Alarm – the armed detector immediately reacts to a threat and raises the alarm.         Operating Mode         Operating Mode		
Permanent Deactivation       • Entirely: the device is completely excluded from the system operation. The device does not follow system commands and does not report alarms or other events.         • By number of alarms: the device is automatically disabled when the number of alarms is exceeded (specified in the settings for Devices Auto Deactivation).         Learn more         Alarm Reaction         Shows how the detector reacts to alarms:         • Instant Alarm – the armed detector immediately reacts to a threat and raises the alarm.         • Entry/Exit – when a delay is set, the armed device starts the countdown and doesn't raise the alarm even if triggered until the countdown ends.         • Follower – the detector inherits the		• Lid only: notifications about triggering of
Permanent Deactivation       excluded from the system operation. The device does not follow system commands and does not report alarms or other events.         • By number of alarms: the device is automatically disabled when the number of alarms is exceeded (specified in the settings for Devices Auto Deactivation).         Learn more         Alarm Reaction         Shows how the detector reacts to alarms:         • Instant Alarm – the armed detector immediately reacts to a threat and raises the alarm.         • Entry/Exit – when a delay is set, the armed device starts the countdown and doesn't raise the alarm even if triggered until the countdown ends.         • Follower – the detector inherits the		the tamper is turned off.
Permanent Deactivation       The device does not follow system commands and does not report alarms or other events.         • By number of alarms: the device is automatically disabled when the number of alarms is exceeded (specified in the settings for Devices Auto Deactivation).         Learn more         Alarm Reaction         Shows how the detector reacts to alarms:         • Instant Alarm – the armed detector immediately reacts to a threat and raises the alarm.         • Entry/Exit – when a delay is set, the armed device starts the countdown and doesn't raise the alarm even if triggered until the countdown ends.         • Follower – the detector inherits the		• Entirely: the device is completely
automatically disabled when the number of alarms is exceeded (specified in the settings for Devices Auto Deactivation).         Learn more         Alarm Reaction         Shows how the detector reacts to alarms:         • Instant Alarm – the armed detector immediately reacts to a threat and raises the alarm.         • Entry/Exit – when a delay is set, the armed device starts the countdown and doesn't raise the alarm even if triggered until the countdown ends.         • Follower – the detector inherits the	Permanent Deactivation	The device does not follow system commands and does not report alarms
of alarms is exceeded (specified in the settings for Devices Auto Deactivation).       Learn more         Learn more       Alarm Reaction         Shows how the detector reacts to alarms:       • Instant Alarm – the armed detector immediately reacts to a threat and raises the alarm.         Operating Mode       • Entry/Exit – when a delay is set, the armed device starts the countdown and doesn't raise the alarm even if triggered until the countdown ends.         • Follower – the detector inherits the		• By number of alarms: the device is
Deactivation).         Learn more         Alarm Reaction         Shows how the detector reacts to alarms:         • Instant Alarm – the armed detector immediately reacts to a threat and raises the alarm.         • Entry/Exit – when a delay is set, the armed device starts the countdown and doesn't raise the alarm even if triggered until the countdown ends.         • Follower – the detector inherits the		automatically disabled when the number of alarms is exceeded (specified in the
Learn more         Alarm Reaction         Shows how the detector reacts to alarms:         • Instant Alarm – the armed detector immediately reacts to a threat and raises the alarm.         • Entry/Exit – when a delay is set, the armed device starts the countdown and doesn't raise the alarm even if triggered until the countdown ends.         • Follower – the detector inherits the		
Alarm Reaction         Shows how the detector reacts to alarms:         • Instant Alarm – the armed detector immediately reacts to a threat and raises the alarm.         • Entry/Exit – when a delay is set, the armed device starts the countdown and doesn't raise the alarm even if triggered until the countdown ends.         • Follower – the detector inherits the		Deactivation).
Operating Mode       Shows how the detector reacts to alarms:         • Instant Alarm – the armed detector immediately reacts to a threat and raises the alarm.         • Entry/Exit – when a delay is set, the armed device starts the countdown and doesn't raise the alarm even if triggered until the countdown ends.         • Follower – the detector inherits the		Learn more
<ul> <li>Instant Alarm – the armed detector immediately reacts to a threat and raises the alarm.</li> <li>Entry/Exit – when a delay is set, the armed device starts the countdown and doesn't raise the alarm even if triggered until the countdown ends.</li> <li>Follower – the detector inherits the</li> </ul>	Alarm F	Reaction
<ul> <li>immediately reacts to a threat and raises the alarm.</li> <li>Entry/Exit – when a delay is set, the armed device starts the countdown and doesn't raise the alarm even if triggered until the countdown ends.</li> <li>Follower – the detector inherits the</li> </ul>		Shows how the detector reacts to alarms:
raises the alarm.         • Entry/Exit – when a delay is set, the         armed device starts the countdown and         doesn't raise the alarm even if triggered         until the countdown ends.         • Follower – the detector inherits the		• Instant Alarm – the armed detector
Operating Modearmed device starts the countdown and doesn't raise the alarm even if triggered until the countdown ends.• Follower – the detector inherits the		
Operating Modedoesn't raise the alarm even if triggered until the countdown ends.• Follower - the detector inherits the		• Entry/Exit – when a delay is set, the
	Operating Mode	doesn't raise the alarm even if triggered
		• Follower – the detector inherits the
delays from Entry/Exit detectors.		delays from Entry/Exit detectors.

	However, when the Follower is triggered individually, it immediately raises the alarm.
Delay When Entering, sec	Delay time when entering: from 5 to 120 seconds. Delay when entering (alarm activation delay) is the time the user has to disarm the security system after entering the secured area.
Delay When Leaving, sec	Delay time when leaving: from 5 to 120 seconds. Delay when leaving (arming delay) is the time the user has to leave the secured area after the security system arming.
Night Mode Delay When Entering, sec	Delay time when entering in the <b>Night</b> <b>mode</b> : from 5 to 120 seconds. Delay when entering (alarm activation delay) is the time the user has to disarm the security system after entering the premises. <b>Learn more</b>
Night Mode Delay When Leaving, sec	Delay time when leaving in the <b>Night mode</b> : from 5 to 120 seconds. Delay when leaving (arming delay) is the time the user has to leave the premises after the security system arming.
Firmware	Detector firmware version.
	Detector ID. Also available on the QR code

Detector ID	on the detector enclosure and its package box.
Device №	Number of the device loop (zone).

## Settings

To change MotionProtect Plus settings in the Ajax app:

- **1.** Go to the **Devices •** tab.
- 2. Select MotionProtect Plus from the list.
- **3.** Go to **Settings** by clicking on the gear icon O.
- **4.** Set the required parameters.
- 5. Click **Back** to save the new settings.

Setting	Value
	Detector name. It is displayed in the list of hub devices, SMS text, and notifications in the event feed.
Name	To change the detector name, click on the pencil icon $\swarrow$ .
	The name can contain 12 Cyrillic characters or 24 Latin characters.
	Selecting the virtual room to which the MotionProtect Plus is assigned.
Room	The room's name is displayed in the SMS text and notifications in the event feed.
	When the option is disabled, the LED

Alarm LED indication	<ul> <li>indicator of the detector doesn't notify about alarms or tamper triggering.</li> <li>Available for devices with firmware version 5.55.0.0 and higher.</li> <li>How to find the firmware version of the detector</li> </ul>
Sensitivity	<ul> <li>Choosing the sensitivity level of the motion detector.</li> <li>The choice depends on the type of the object, the presence of probable sources of false alarms, and the specifics of the secured area:</li> <li>Low – it does not react to animals up to 50 cm tall.</li> <li>Normal (by default) – it does not react to small dogs (up to 35 cm tall).</li> <li>High – the detector does not react to cats (up to 25 cm tall).</li> <li>Why motion detectors react to animals and how to avoid this</li> </ul>
Always Active	When this option is enabled, the detector is always in the armed mode and detects motion. Learn more
Alert with a siren if motion detected	If active, <b>Sirens</b> added to the system are activated when the motion is detected.
Alarm Reaction	
	<ul> <li>Specify how this device will react to alarms:</li> <li>Instant Alarm – the armed detector immediately reacts to a threat and</li> </ul>

Operating Mode	<ul> <li>Entry/Exit – when a delay is set, the armed device starts the countdown and doesn't raise the alarm even if triggered until the countdown ends.</li> <li>Follower – the detector inherits the delays from Entry/Exit detectors. However, when the Follower is triggered individually, it immediately raises the alarm.</li> </ul>
Delay When Entering, sec	Delay time when entering: from 5 to 120 seconds. Delay when entering (alarm activation delay) is the time the user has to disarm the security system after entering the secured area.
Delay When Leaving, sec	Delay time when leaving: from 5 to 120 seconds. Delay when leaving (arming delay) is the time the user has to leave the secured area after the security system arming.
Arm in Night Mode	If this option is enabled, the detector will go into the armed mode when the system is set to the <b>Night mode</b> . Learn more
Night Mode Delay When Entering, sec	Delay time when entering in the <b>Night</b> <b>mode</b> : from 5 to 120 seconds. Delay when entering (alarm activation delay) is the time the user has to disarm the security system after entering the premises.

	Learn more
Night Mode Delay When Leaving, sec	Delay time when leaving in the <b>Night Mode</b> : from 5 to 120 seconds. Delay when leaving (arming delay) is the time the user has to leave the premises after the security system arming. <b>Learn more</b>
Jeweller Signal Strength Test	Switches the detector to the Jeweller signal strength test mode. The test allows you to check the signal strength between the hub or the range extender and the detector via the Jeweller wireless data transfer protocol to determine the optimal installation location. The recommended value is 2–3 bars. Learn more
Detection Zone Test	Switches the detector to the detection zone test mode. The test enables users to check how the detector responds to movement and determine the optimal installation location.
Attenuation Test	Switches the detector to the signal attenuation test mode. The test is available for detectors with <b>firmware version 3.50</b> <b>and higher</b> . During the test, the transmitter power is decreased or increased to simulate a change in the environment to test the stability of communication between the detector and the hub or range extender.

	Learn more	
Permanent Deactivation	<ul> <li>Allows the user to disconnect the device without removing it from the system.</li> <li>Two options are available:</li> <li>Entirely – the device will not execute system commands or participate in automation scenarios, and the system will ignore device alarms and other notifications.</li> <li>Lid only – the system will ignore only notifications about the triggering of the device tamper button.</li> <li>Learn more about permanent deactivation of devices</li> <li>The system can also automatically disable devices when the set number of alarms is</li> </ul>	
	exceeded. Learn more about auto deactivation of devices	
User Guide	Opens the MotionProtect Plus user manual in the Ajax app.	
Unpair Device	Unpairs the detector, disconnects it from the hub, and deletes its settings.	

## **Detector operation indication**

Event	Indication	Note
Turning on the detector	Lights up green for about one second	
Detector connection to the <b>hub</b> , <b>ocBridge Plus</b> and <b>uartBridge</b>	Lights up continuously for a few seconds	
Alarm / tamper activation	Lights up green for about one second	Alarm is sent once in 5 seconds
Battery needs replacing	During the alarm,slowly lights up and goes off green	Replacement of the detector battery is described in the <b>Battery</b> <b>Replacement</b> manual

## **Functionality testing**

The Ajax system provides several types of tests to ensure that the installation place is chosen correctly. MotionProtect Plus tests do not start immediately but not later than over a single hub-detector polling interval (36 seconds by default). You can change the ping interval of devices in the **Jeweller** or **Jeweller/Fibra** menu of the hub settings.

#### To run a test in the Ajax app:

- 1. Select the hub if you have several or use the PRO app.
- 2. Go to the **Devices** tab.
- 3. Select MotionProtect Plus from the list.
- 4. Go to Settings <sup>(3)</sup>.
- 5. Select a test:
  - 1. Jeweller Signal Strength Test.
  - 2. Detection Zone Test.
  - 3. Signal Attenuation Test.
- 6. Run the test.

## Selecting the device location





The device is designed for indoor use only.

When choosing where to install MotionProtect Plus, consider the parameters that affect its operation:

- Motion detection zone.
- Jeweller signal strength.
- Distance between the detector and the hub or radio signal range extender.
- Presence of obstacles for radio signal passage: walls, inter-floor ceilings, large objects located in the room.
- Distance between the detector and other MotionProtect Plus Jeweller, Superior MotionProtect Plus Jeweller, or Superior MotionProtect Plus Fibra should be 20 centimeters or more.

The detector must be installed in the corner of the room or on a flat and not shaky vertical surface. If the device is installed on an unstable surface, this can lead to false alarms.

Consider the recommendations for placement when developing a project for the facility's security system. The security system must be designed and installed by specialists. A list of authorized partners is **available here**.

### Signal strength

Jeweller signal level is determined by the number of undelivered or damaged data packets exchanged between the detector and a hub or range extender in a certain period of time. The icon on the **Devices** tab and the corresponding field in the device **States** indicate the signal strength:

- Three bars excellent signal strength.
- Two bars good signal strength.
- **One bar** low signal strength, stable operation is not guaranteed.
- Crossed out icon no signal.


Check the Jeweller signal strength before permanent installation. The detector should have 2 or 3 divisions of signal strength. To roughly calculate the signal strength at the place of installation, use our **radio communication range calculator**.


With a signal strength of one or zero bars, we do not guarantee the stable operation of the device. For such cases, consider relocating the device as repositioning even by 20 cm can significantly improve the signal strength.

If there is still a low or unstable signal after the relocation, use a **radio** signal range extender.

#### **Detection zone**

When choosing the installation place, consider the direction of the lens, viewing angles of the detector, and the presence of obstacles impairing the view. The intended path of the intruder must be perpendicular to the axis of the detector's lens. Ensure that furniture, house plants, vases, and decorative or glass elements do not obstruct the view of the detector.

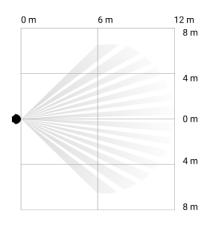

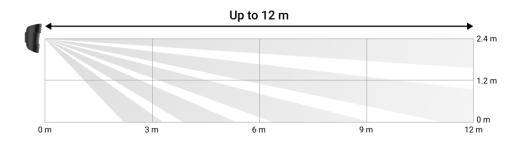


When installing the detector, perform the **Detection Zone Test**. This test is implemented to provide the possibility to check the device's operation and determine the sector in which the detector registers motion.

### Where not to install the detector

- Outdoors. This can lead to false alarms and detector failure. We recommend using **Ajax outdoor detectors** for such cases.
- In places where objects and structures can block the detector's view.
   For example, behind a flower or a column. In this case, the view will be limited, and it will be more difficult for MotionProtect Plus to detect motion.
- In places where glass structures may block the detector's view. MotionProtect Plus does not register motion behind glass.
- Inside premises with temperature and humidity outside the permissible limits. This could damage the detector. We recommend using Ajax outdoor detectors for such cases.
- At a distance of less than 1 meter from the hub or radio signal range extender. This can lead to a loss of communication with the detector.
- In places with unstable or low signal strength with the detector: 1 or 0 bars of the Jeweller signal level). This can lead to a loss of communication with the detector.
- Near other MotionProtect Plus Jeweller, Superior MotionProtect Plus

Jeweller, or Superior MotionProtect Plus Fibra. The minimum distance between devices should be **at least 20 centimeters**. Otherwise, it can decrease detection quality or trigger false alarms due to wave interference of K-band microwave sensors.

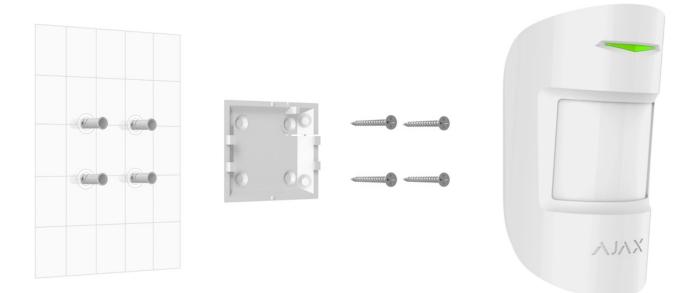


### **Detector installation**

Before installing MotionProtect Plus, ensure that you have selected the optimal location that complies with the requirements of this manual.

#### To mount a detector:

i

- **1.** Remove the SmartBracket mounting panel from the detector by sliding it down.
- Fix the SmartBracket panel using double-sided tape or other temporary fasteners. SmartBracket can be mounted on a vertical surface or in the corner of the room. The installation height is 2.4 meters.

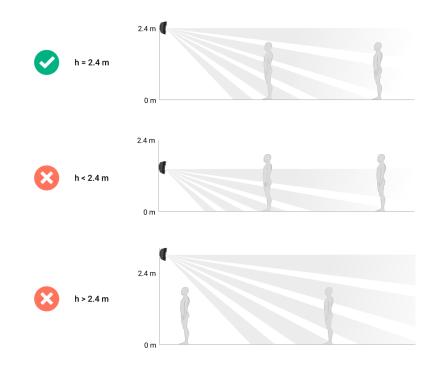


Double-sided tape can only be used for temporary installation. The device attached by the tape may come unstuck from the surface. As long as the device is taped, the tamper will not be triggered when the device is detached from the surface.

- 3. Mount the detector on SmartBracket.
- 4. Run the Jeweller signal strength test. The recommended signal strength is 2 or 3 bars. If the signal strength is low (a single bar or lower), we do not guarantee stable operation of the device. In such cases, consider relocating the device as repositioning even by 20 cm can significantly improve the signal strength. If there is still a poor or unstable signal after the relocation, use a radio signal range extender.
- 5. Run the <u>Detection zone test</u>. To check the motion detector, walk around the facility while observing the LED and determine the detector detection zone. The range of motion detection is 12 meters. If the detector did not react to movement during the test in 5 out of 5 cases, relocate the device or change its sensitivity.
- 6. Remove the detector from SmartBracket.
- **7.** Attach the SmartBracket mounting panel with the bundled screws using all fixation points (one of them is in the perforated part of the

mounting panel above the tamper). When using other fasteners, ensure they do not damage or deform the mounting panel.

The mounting panel allows mounting MotionProtect Plus on a vertical surface or in the corner of a room. SmartBracket has holes to be drilled to fix the panel with the bundled screws.

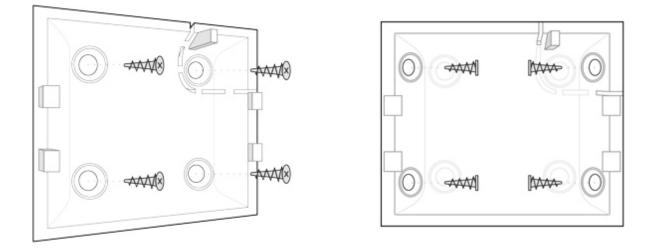

**8.** Place the detector on the SmartBracket mounting panel.

### **Detector Maintenance**

Check the operational capability of the Ajax MotionProtect Plus detector on a regular basis. The optimal frequency of checks is once every three months.

Clean the detector body from dust, spider webs and other contaminants as they appear. Use soft dry napkin suitable for equipment maintenance.

Do not use any substances containing alcohol, acetone, gasoline and other active solvents for cleaning the detector. Wipe the lens very carefully and gently – any scratches on the plastic may cause reduction of the detector sensitivity.

The pre-installed battery ensures up to 5 years of autonomous operation (with the inquiry frequency by the hub of 3 minutes). If the detector battery

is discharged, the security system will send respective notices. The LED will smoothly light up and go out if the detector detects any motion or the tamper is actuated.

# How long MotionProtect Plus Jeweller will operate on pre-installed battery

How to replace batteries in MotionProtect Plus Jeweller

## **Technical specifications**

All technical specifications of MotionProtect Plus Jeweller

**Compliance with standards** 

### **Complete Set**

- 1. MotionProtect Plus Jeweller.
- 2. SmartBracket mounting panel.
- 3. Battery CR123A (pre-installed).
- 4. Installation kit.
- 5. Quick start guide.

## Warranty

Warranty for the Limited Liability Company "Ajax Systems Manufacturing" products is valid for 2 years after the purchase and does not apply to the pre-installed battery.

If the device does not work correctly, you should first contact the support service — in half of the cases, technical issues can be solved remotely!

#### The full text of the warranty

**User Agreement** 

#### **Contact Technical Support:**

- e-mail
- Telegram

Subscribe to the newsletter about safe life. No spam

Subscribe